

Remote Control Compatibility and Features

This article provides important information about your remote control, including device compatibility and functionality by mode.

Compatible Devices:

- Rally Bar
- Rally Bar Mini
- Rally Bar Huddle
- MeetUp 2
- Rally Bar No-Radio
- RoomMate
- Rally Board 65*

How to Use This Guide:

The remote control features are organized by mode. In the accompanying image, each button is labelled with a number. Below, you'll find a list of functions corresponding to each numbered button based on the current mode of the remote.

Please review the features listed below according to the mode you're using.



Button	PTZ (Android mode)	Navigation (Onboarding/Settings)	USB Mode
1	Camera pan up	Menu - move up	Camera pan up
2	Camera pan diagonal up/right	Menu - move diagonal up/right	Camera pan diagonal up/right
3	Camera pan right	Menu - move right	Camera pan right
4	Camera pan diagonal down/right	Menu - move diagonal down/right	Camera pan diagonal down/right
5	Camera pan down	Menu - move down	Camera pan down
6	Camera pan diagonal down/left	Menu - move diagonal down/left	Camera pan diagonal down/left
7	Camera pan left	Menu - move left	Camera pan left
8	Camera pan diagonal up/left	Menu - move diagonal up/left	Camera pan diagonal up/left
9	Home preset/restart Rightsight	Select	Home preset/restart Rightsight
10	No function	Back menu hierarchy	No function
11	Alternate hook switch on/off	Alternate hook switch on/off	Alternate hook switch on/off
12	Camera zoom in	No function	Camera zoom in
13	Camera zoom out	No function	Camera zoom out
14	Increase speaker volume	Increase speaker volume	Increase speaker volume
15	Decrease speaker volume	Decrease speaker volume	Decrease speaker volume
16	Mute microphone	Mute microphone	Mute microphone
17	Preset	Preset	Teams button*

**If you're also using Logitech Tap with the Teams Button (see number 17), the button will revert to a camera preset.*